

DE

**Montageanleitung –
BETTEMINIMUM WANNENTRAEGER**

GB

**Installation instructions –
BETTEMINIMUM-POLYSTYRENE SUPPORT**

FR

**Instructions de montage –
BETTESUPPORT MINIMUM**

NL

**Montagehandleiding –
BETTEMINIMUM-DOUCHEBAKDRAGER**

IT

**Istruzioni di montaggio –
BETTESUPPORTO IN POLISTIROLO SLIM**

ES

**Instrucciones de montaje –
BETTESOPORTE DE POLIESTIRENO
MINIMUM**

RU

**Инструкция по монтажу –
BETTEМИНИМАЛЬНАЯ ПОЛИСТИРОЛОВАЯ
ПОДУШКА**

CN

**安装说明书 –
BETTE超薄贴地型淋浴底盘基座**

CZ

**NÁVOD K MONTÁŽI –
BETTENOSIČ VANIČKY MINIMUM**


SK





**Návod na montáž –
BETTEMINIMALISTICKÝ NOSIČ VANIČKY**

PL


**Instrukcja montażu –
BETTEMINIMALNE PODPARCIE BRODZIKA**

BETTE

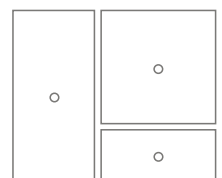


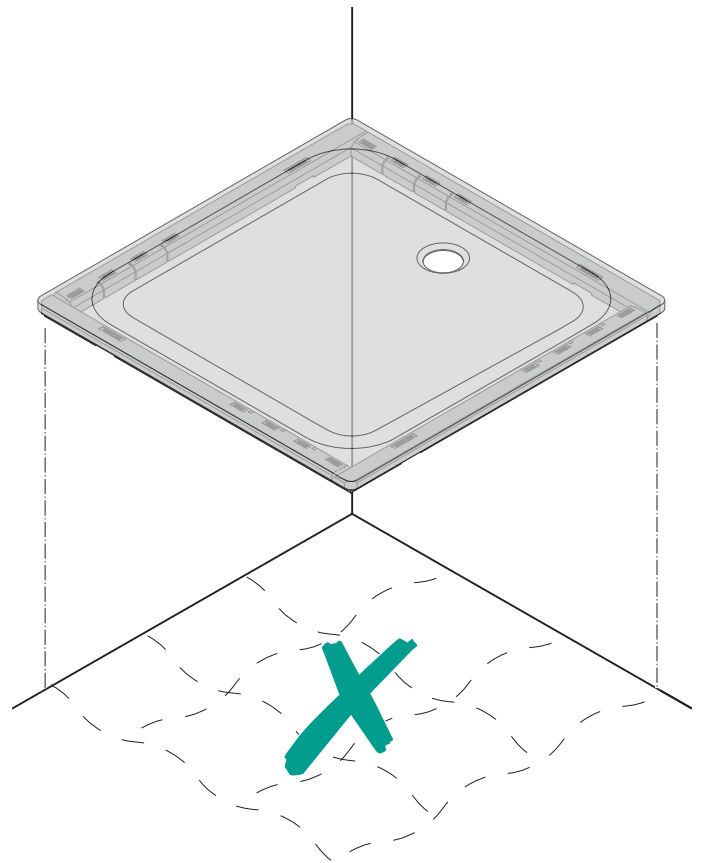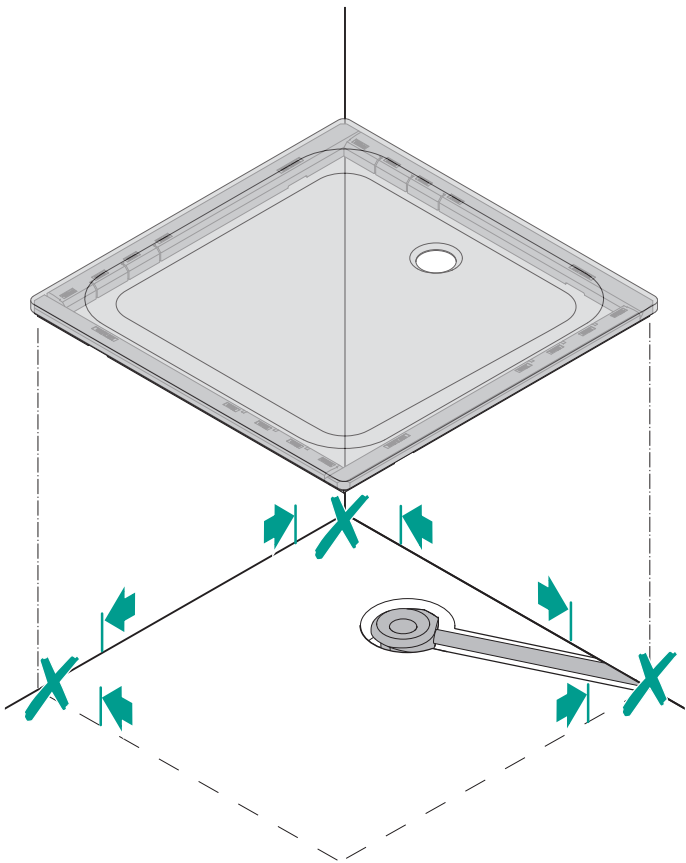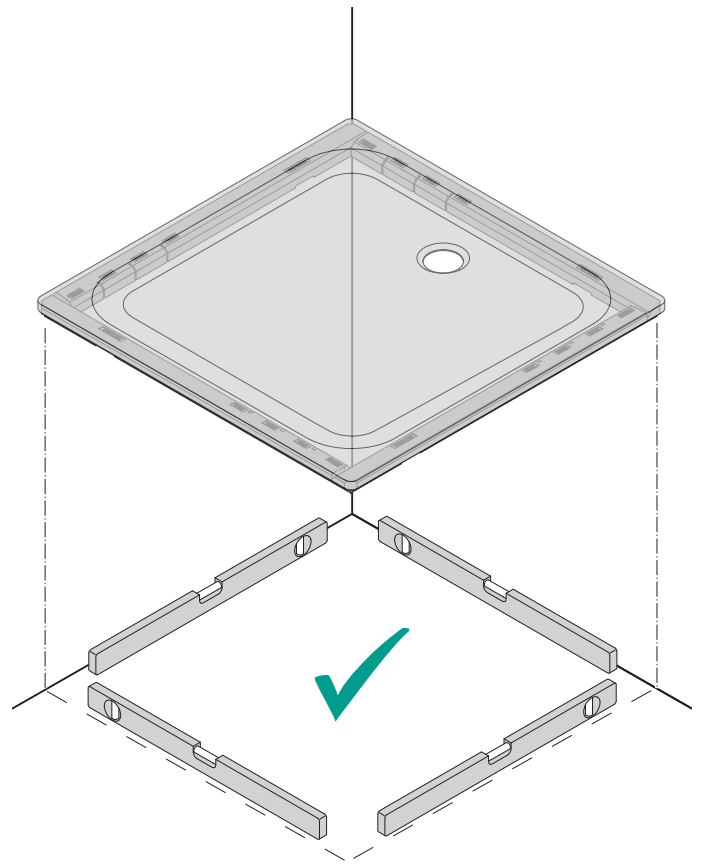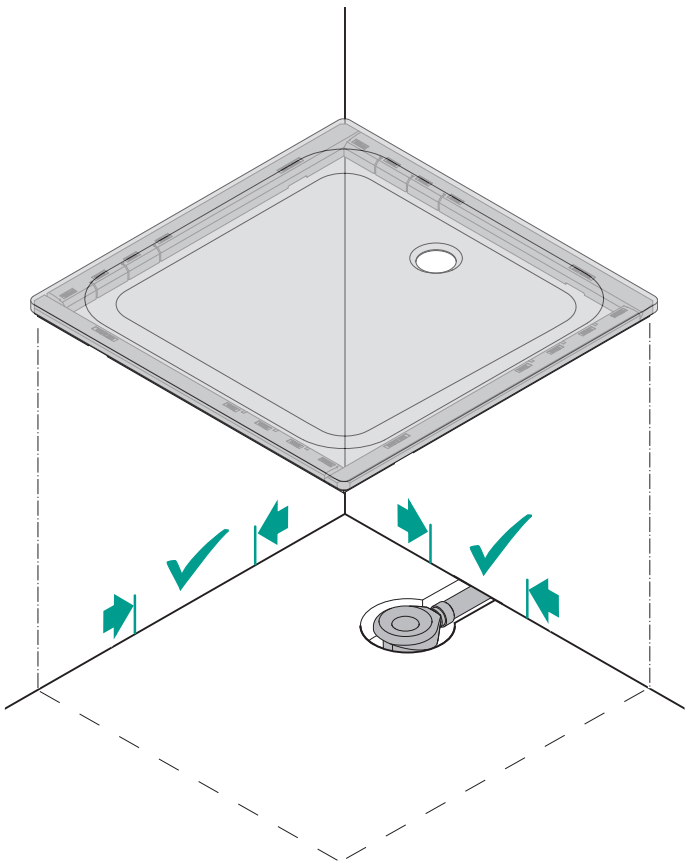


1

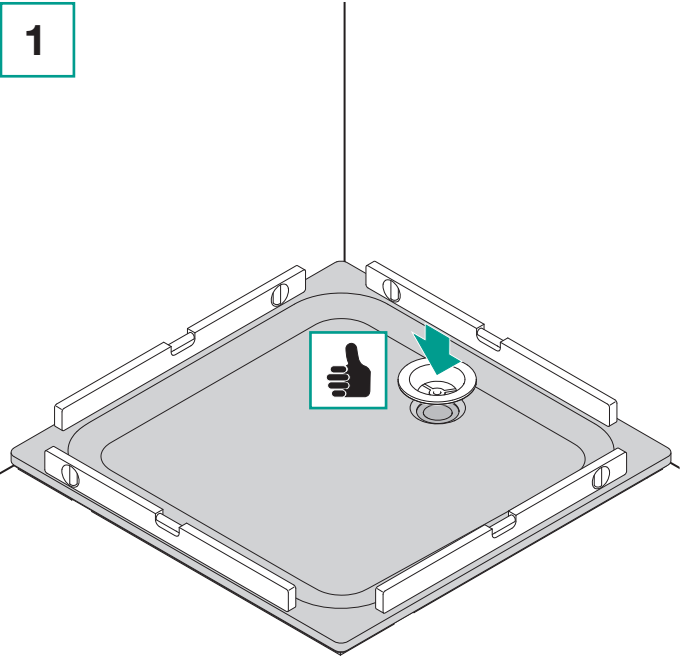


2

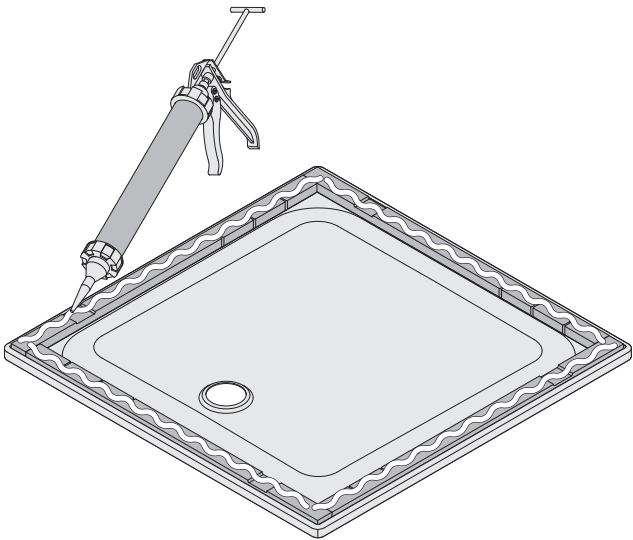


3

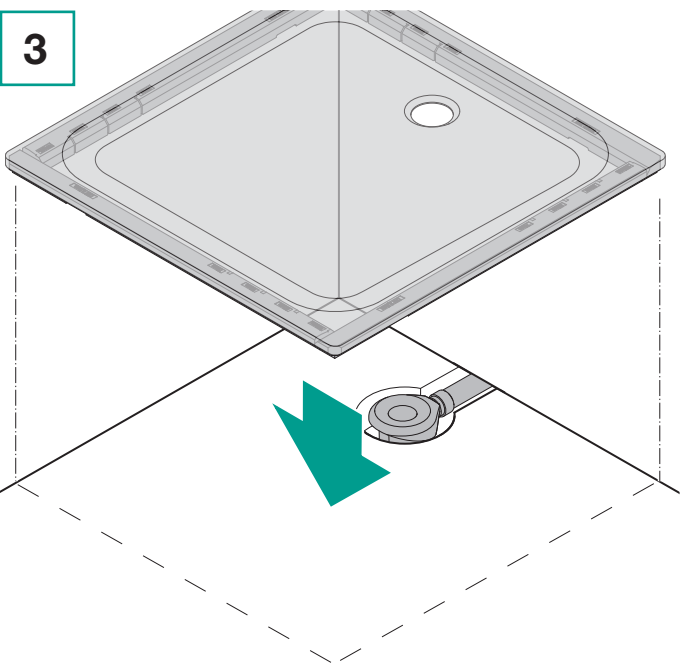

4

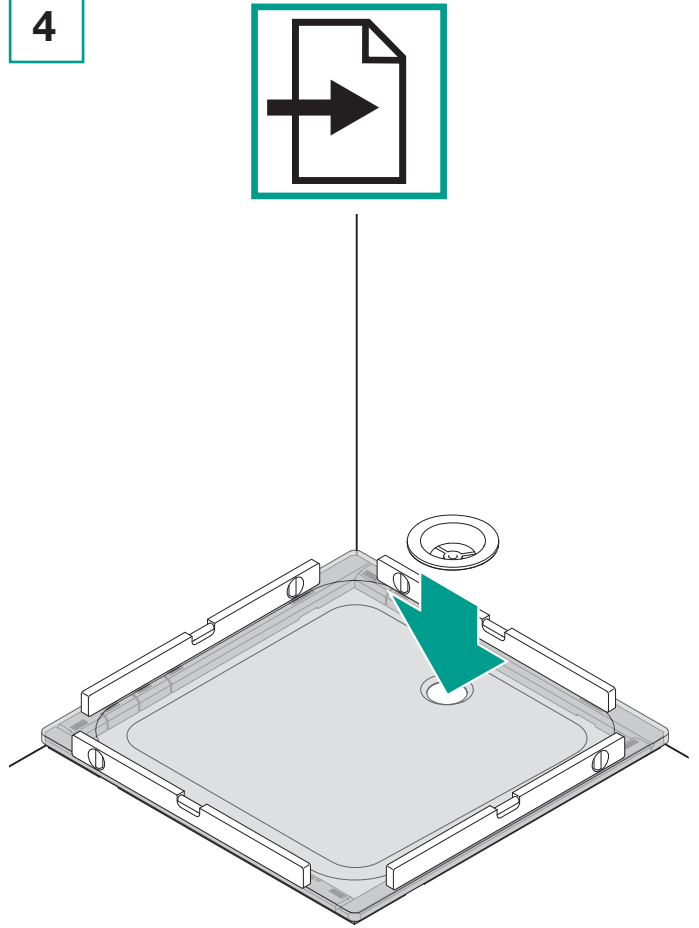

5

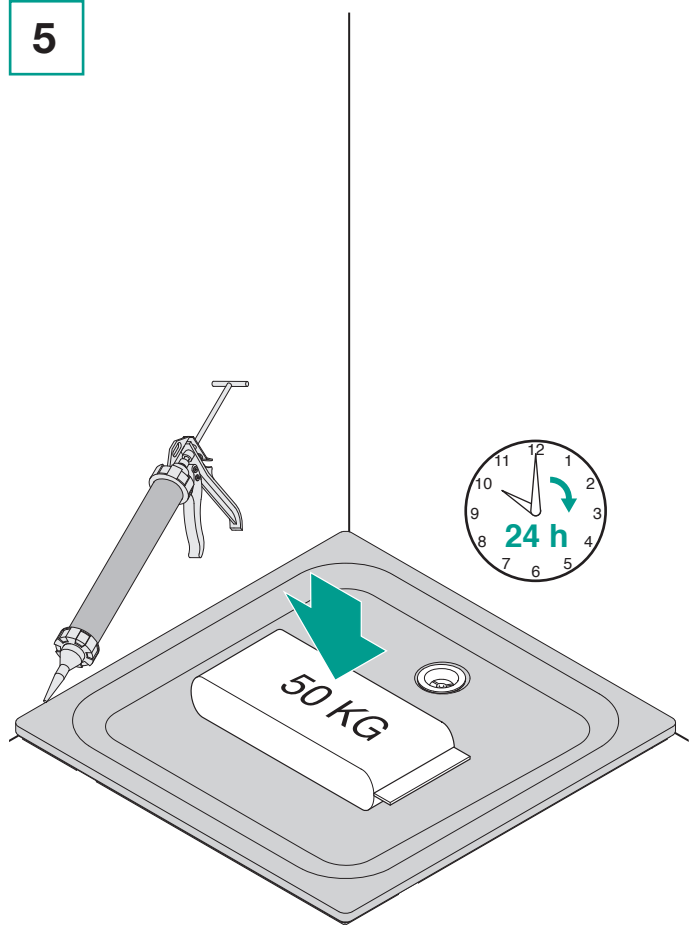

Bette GmbH & Co. KG
Heinrich-Bette-Straße 1
D-33129 Delbrück
Tel.: +49 5250 511-0
Fax: +49 5250 511-130
info@bette.de
www.bette.de